Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

2191 Mendenhall Dr. Suite 105 North Las Vegas, NV 89031 TEL: 702-399-1423 FAX: 702-399-1431 8am-5pm Pacific Time Monday through Friday

Website Address http://www.dynojet.com

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.




E1160.001

European Models Only

1994-98 Honda CB500 & '98 CB500S

Stage 1

For mildly tuned machines using the stock airbox, with stock or K&N filter. May also be used with a good aftermarket exhaust system K&N filter #N/A

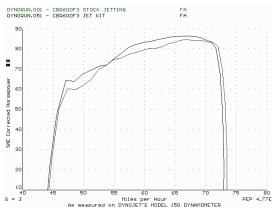

This graph shows a typical gain with a Dynojet jet kit.

WARNING

NO SMOKING! NO OPEN FLAME! WHILE INSTALLING YOUR DYNOJET KIT

Parts List		
2	Main Jets	DJ120
2	Main Jets	DJ124
2	Fuel Needles	DNO307
2	E-Clips	DE0001
2	Adjusting Washers	DW0001
2	Slide Springs	DSP007

STAGE ONE INSTRUCTIONS

- DY())0030 E1160.001
- 1. Remove vacuum slides from carbs. Remove spring from slide. Thread one of the slide cover screws into the center of the needle retainer (Fig. A) and pull up gently. Remove stock needles & spacers, noting order of assembly (Fig. B).
- 2. Install Dynojet needles on groove #4 from the top. Use all stock spacers (Fig. B). Install the small Dynojet washers above the E-clip. Install the Dynojet springs in place of the stock slide springs.
- 3. Remove the stock main jets and replace with the Dynojet main jets provided. If you are using the stock exhaust install the DJ120 main jets. If you are using an aftermarket exhaust or slip-on with a high flowing baffle, use the DJ124 main jets. Be sure that the jets you are changing are the main jets.
- 4 Locate the fuel mixture screw (Fig. C). Carefully turn mixture screw clockwise until lightly seated, then turn out 3 turns.

