Thank you for purchasing this Dynojet kit. This kit has been developed for a motorcycle which is set to the parameters listed at the right in the "Stage" description. If your motorcycle does not meet any of these parameters please check with Dynojet before installation. For technical assistance contact your Dynojet distributor or call Dynojet U.S.A. (800)-992-4993

> 2191 Mendenhall Dr. Suite 105 North Las Vegas, NV 89031 TEL: 702-399-1423 FAX: 702-399-1431 8am-5pm Pacific Time Monday through Friday

> > Website Address http://www.dynojet.com

The manufacturer and seller make no warranties express or implied which extend beyond the description of the goods contained herein. Any description of this product is for the purpose of identifying it and shall not be deemed to create an express warranty.




9112.001

U.S Models Only

2003 KTM 525SX

Stage 1

For mildly tuned machines using the stock airbox, with stock or stock replacement air filter. May also be used with a good aftermarket exhaust system

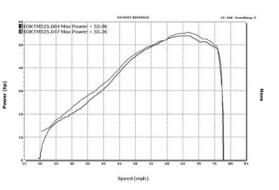

Davida Liad		
Parts List		
1	Main Jet	DJ134
1	Main Jet	DJ136
1	Main Jet	DJ138
1	Main Jet	DJ140
1	Main Jet	DJ142
1	Main Jet	DJ144
1	Main Jet	DJ146
1	Main Jet	DJ148
1	Main Jet	DJ150
1	Fuel Needle	DNO983
1	E-Clip	DE0001
1	Adjusting Washer	DW0001
1	Main Jet Adapter	DJA001

WARNING

NO SMOKING!

NO OPEN FLAME!

WHILE INSTALLING

YOUR DYNOJET KIT

This graph shows a typical gain with a Dynojet jet kit.

STAGE ONE INSTRUCTIONS

DYNOJET 9112.001


NOTE: This kit can be installed without completely removing the carburetor.

1. Remove the top of the carb. Remove the allen screw (Fig.A) and pull out the stock needle and spacers, noting order of assembly.

2. Install the Dynojet needle on groove #2 from the top. Install the small Dynojet washer above the e-clip.

3. Remove the stock main jet. NOTE: The main jet can be accessed by removing the nut from the bottom of the float bowl (Fig. B). Install the Dynojet main jet adapter (DJA001) into the emulsion tube first, then install the Dynojet main jet provided. If you are running the stock exhaust install the DJ144 for under 3000 ft. Install the DJ140 main jet from 3000-6000 ft. Install the DJ136 main jet if above 6000 ft. If you are running an aftermarket exhaust or slip-on with a high flow baffle use the DJ148 main jet. Install the DJ144 main jet from 3000-6000 ft. Install the DJ140 main jet if above 6000 ft. Be sure that the jet you are changing is the main jet.

4. Locate the fuel mixture screw (Fig.B). Carefully turn the mixture screw clockwise until lightly seated, then back out 3.5 turns.

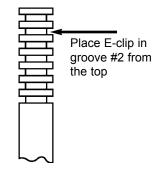



Remove this allen screw to access the needle

